


03078 Instruction



A . Features

- 6 Digits LCD Display, Display Hour ,Minute ,Second ,Month ,Day and Week
- Daily Alarm and Chime hourly
- Snooze
- 12 / 24H format selectable, Auto Calendar
- 1/100 second Chronograph with split functions
- EL backlight

B . Operational Manual

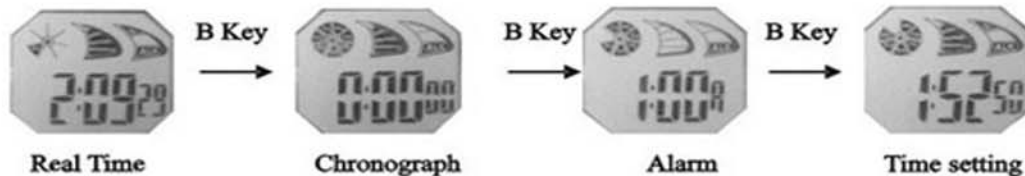

1. At any state ,press A key EL backlight for 3s .

2. Real Time

- Press C key to display Alarm ;Press D key to display Date .
- Turn On / Off Alarm and Chime
 - a). Press C + D key to turn on / off Alarm ,indicator " ALM " displaying for On .
 - b). Press C + B key to turn On / Off Chime ,all days of week displaying for On .

3. Chronograph

- Press D key to Start/Stop running ;
- When stop ,press C key to zero .
- When running ,press C key to split count .
- Then press D key to exit split count ,and stop counting ;
- When exit split count ,press C key to display all counts ; and press C key again to zero ;
- When running ,press B key to return to Real Time Mode ,and it running at back .

4. Alarm Setting

- "Hour " flashing once entry Daily Alarm .
- Press C key to select "Hour " or "Minute "setting
- Press D key to adjust the flashing item
- Press C key to confirm
- Press B key to return to Real Time mode
- Alarm Snooze ON/OFF

At Alarm sounding state ,press C key to stop sounding ,and press D key to ON/OFF snooze function .When Snooze function be ON ,it will sound five minutes later ,and auto stop after sounding for a minute .

5. Time Setting

- "Second " flashing when loading ,press D key to zero ; Press C key to select item as following sequence :
- Minute → Hour → Day → Month → Weekday
- Press D key to adjust the flashing item.
 - When setting "Hour " ,"H" display for 2 4 H format ;"A" or "P" for 1 2 H format .