

# 03131 LCD Instruction (20141119) MX

<p>(Light) (Start) A C B D (Mode) (Reset)</p>	<ul style="list-style-type: none"> <li>• AM/PM (P = PM, blank = AM)</li> <li>• Time (HH:MM:SS)</li> <li>• Alarm and chime indicators [ A ]], [ ㉟ ]</li> <li>• Date (MM-DD)</li> </ul> <p>From TIME DISPLAY mode, press B three times to enter TIME SETTING mode (seconds will flash).</p> <ul style="list-style-type: none"> <li>• SECONDS: If seconds show 1-29, pressing D will reset seconds to 00. If seconds show 30-59, pressing D will advance to the next minute.</li> <li>• HOUR: Press C to select the hour, then press D to advance. On the display, "A" means "AM," "P" means "PM," and "H" means time will be shown in 24-hour / military time.</li> <li>• MINUTE: Press C to select the minute, then press D to advance.</li> <li>• MONTH: Press C to select the month, then press D to advance.</li> <li>• DATE: Press C to select the date, then press D to advance.</li> <li>• DAY: Press C to select the day, then press D to advance.</li> </ul>
<p><b>FEATURES</b> Time - Date - Alarm - Chime - 1/100 sec stopwatch - EL backlight</p> <p><b>BUTTONS</b> A: Light B: Mode C: Start D: Reset</p> <p><b>MODES</b> TIME DISPLAY -&gt; STOPWATCH -&gt; ALARM SETTING -&gt; TIME SETTING</p> <p><b>TIME DISPLAY features and setting</b></p> <ul style="list-style-type: none"> <li>• Day (2-letter abbreviation)</li> </ul>	

Front side 50x100mm

<p>Press B to return to TIME DISPLAY mode.</p> <p><b>STOPWATCH features and use</b></p> <ul style="list-style-type: none"> <li>• ST</li> <li>• Time (MM:SS:1/100s)</li> <li>• Alarm and chime indicators [ A ]], [ ㉟ ]</li> <li>• Hour</li> </ul> <p>From TIME DISPLAY mode, press B once to enter STOPWATCH mode.</p> <ul style="list-style-type: none"> <li>• Press D to start timing.</li> <li>• To view split time, press C. SP will display. ' and " will flash when elapsed time is still recording in the background. Press C again to view elapsed time.</li> <li>• To pause recording, press D. Press D again to continue recording, or press C to reset to zero.</li> </ul> <p><b>ALARM features and setting</b></p> <ul style="list-style-type: none"> <li>• AL</li> <li>• HH:MM</li> </ul>	<ul style="list-style-type: none"> <li>• Alarm and chime indicators [ A ]], [ ㉟ ]</li> </ul> <p>From TIME DISPLAY mode, press B twice to enter ALARM SETTING mode.</p> <ul style="list-style-type: none"> <li>• Press D to toggle among the following options:             <ul style="list-style-type: none"> <li>◦ Alarm on [ A ]]</li> <li>◦ Chime on [ ㉟ ] (alarm will sound briefly at the top of every hour)</li> <li>◦ Alarm and chime on [ A ]) and [ ㉟ ]</li> <li>◦ Alarm and chime off</li> </ul> </li> <li>• Press C to select the hour, then press D to advance.</li> <li>• Press C to select the minute, then press D to advance.</li> </ul> <p>When the alarm is sounding, press C or D to silence.</p> <p><b>BATTERY</b> Lithium CR2016, 3.0 V (included)</p> <div style="border: 1px solid black; padding: 2px; text-align: center;"> <p>⚠ <b>WARNING: DO NOT DISPOSE OF BATTERY IN FIRE. BATTERY MAY EXPLODE OR LEAK.</b></p> </div> <p style="text-align: right;">Printed in China</p>
--	---

Back side 50x100mm