

TALKING WATCH MANUAL (model 03238)



MODES: TIME DISPLAY -> TIME SETTING -> ALARM SETTING

TIME ANNOUNCEMENT: From TIME DISPLAY mode, press B to hear the current time.

TIME SETTING: From TIME DISPLAY mode, press A to enter TIME SETTING mode (time will flash).

- HOUR: PRESS C TO ADVANCE THE HOUR. The hour will be announced with each press.
- MINUTE: PRESS D TO ADVANCE THE MINUTE. The minute will be announced with each press.
- Wait a few seconds. The time will be announced, and the setting will be saved.

ALARM AND CHIME SETTING: From TIME DISPLAY mode, press A twice to enter ALARM SETTING mode (AL will appear in the center of the face, and the current alarm setting will flash).

- HOUR: PRESS C TO ADVANCE THE HOUR. The hour will be announced with each press.
- MINUTE: PRESS D TO ADVANCE THE MINUTE. The minute will be announced with each press.
- Wait a few seconds. The alarm time will be announced, and the setting will be saved.
- To select the alarm sound, from TIME DISPLAY mode, press C repeatedly to select the sound (the available selections are BEEP-BEEP-BEEP, CUCKOO, COCK-A-DOODLE-DOO, Pachelbel's Canon, Offenbach's Can Can, Mozart's Piano Sonata 11, or SILENCE). A \sphericalangle symbol will appear at the bottom of the display when an alarm sound is selected. When an alarm sounds, press B to snooze (it will sound again after 5 minutes) or press C or D to silence it.
- To turn the chime on or off, from TIME DISPLAY mode, press D. When the chime is on, a \llcorner symbol will appear at the top of the display: The time will be announced at the top of each hour.

WATER RESISTANCE: This watch will withstand incidental splashes of water but should not be submerged.

BATTERY: Lithium CR2025, 3.0 V (included)

WARNING: DO NOT DISPOSE OF BATTERY IN FIRE. BATTERY MAY EXPLODE OR LEAK.

Printed in China

130mmX85mm