


03080 Instruction



A. Features

- 10 Digits LCD Display, Display Hour, Minute, Second, Month, Day and Week
- Daily Alarm and Chime hourly
- 12 / 24H format selectable, Auto Calendar
- Chronograph with LAP function, it ups to 59'59.99"
- Fast advance for time and alarm time set.
- Press B, C and D keys LCD full display, Press B, C and D keys to return to Real Time mode.
- There is tone while Press B key
- EL backlight

B. Operational Manual

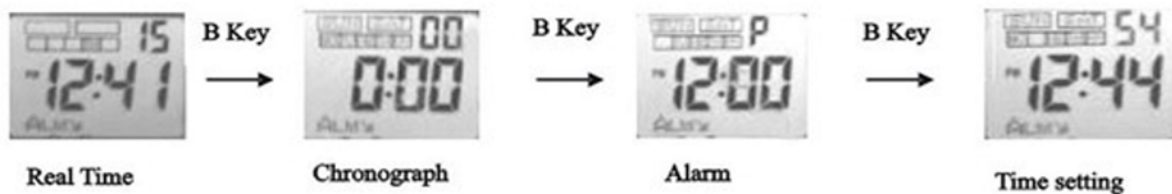

1. At any state, press A key EL backlight for 3s.

2. Real Time

- Press C key to display Alarm; Press D key to display Date.
- Turn On / Off Alarm and Chime
 - a). Press C + D key to turn on / off Alarm, indicator "ALM" displaying for On.
 - b). Press C + B key to turn On / Off Chime, all days of week displaying for On.

3. Chronograph

- Press D key to Start/Stop running;
- When stop, press C key to zero.
- When running, press C key to split count.
- Then press D key to exit split count, and stop counting;
- When exit split count, press C key to display all counts; and press C key again to zero;
- When running, press B key to return to Real Time Mode, and it running at back.

4. Alarm Setting

- "Hour" flashing once entry Daily Alarm.
- Press C key to select "Hour" or "Minute" setting
- Press D key to adjust the flashing item
- Press C key to confirm
- Press B key to return to Real Time mode
- Alarm Snooze ON/OFF

At Alarm sounding state, press C key to stop sounding, and press D key to ON/OFF snooze function. When Snooze function be ON, it will sound five minutes later, and auto stop after sounding for a minute.

5. Time Setting

- "Second" flashing when loading, press D key to zero; Press C key to select item as following sequence:
Minute → Hour → Day → Month → Weekday
- Press D key to adjust the flashing item.
 - When setting "Hour", "H" display for 24H format; "A" or "P" for 12H format.